

Assembly Instructions and Repair Parts list for RU-50 'ROPS' TRACTOR UMBRELLA

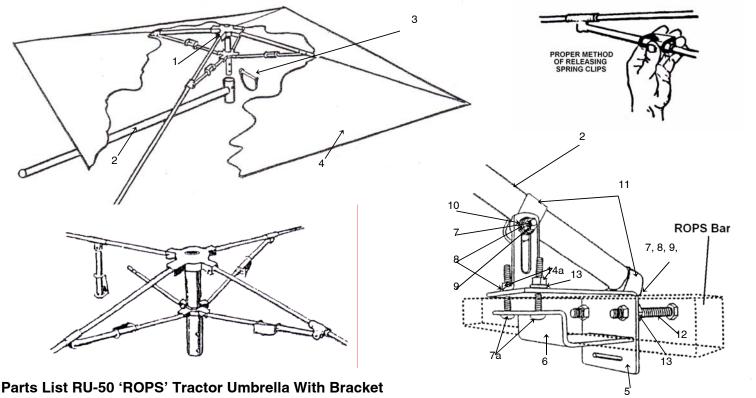


Illustration Number	Snowco Part No.	Description	Qty.
1	405163	ROPS Frame	1
2	405165	ROPS Shaft w/ Tee	1
3	405258	Lock Pin - 1/4" x 1.75" Round	1
4	405123	Cover, RU/TU-50 (Specify Color if applicable)	1
5	454705	Top ROPS Bracket Assembly	1
6	450250	Bottom ROPS Bracket	1
7	490212	Bolt, Carr 3/8" - 16 x 2-1/2"	4
8	491071	Washer Spring Lock 3/8"	4
9	491003	Hut HH NC Reg 3/8"	4
10	491061	Washer Flat 3/8"	1
11	405204	Clamp Plain Body Tube	2
12	490215	Bolt, 1/2" - 13 x 3.5" UNC Hex Head	2
13	490216	Nut, 1/2" - 13 UNC Hex Head	2



Femco/Snowco

1132 W. 1ST STREET McPherson, KS 67460 Phone: 1-800-677-0898

Assembly Instructions

Mounting Bracket

- 1. Remove (#2) ROPS Shaft w/ Tee from both (#11) clamps.
- 2. Only unfasten (#9a) nuts from (#7a) bolts to break loose preassembled mounting bracket.
- Place (#5) Top ROPS bracket with clamps and pre-assembled hardware over ROPS bar as shown in illustration. The ROPS bar dimensions can vary from 2" x 2" to 3" x 3"
- 4. Connect (#6) Bottom ROPS bracket into (#5) bracket by inserting the tongue into the groove of the top bracket and secure the assembly by using the (#7a) bolts, two (#8) lock washers and (#9a) nuts.
- 5. Secure the bracket assembly around the ROPS bar by tightening (#12) bolts. Lock (#13) nuts to hold (#12) bolts in place.

ROPS Umbrella

- 1. Insert (#2) ROPS Shaft w/Tee into both (#11) clamps on installed mounting bracket. Then tighten (#9) nuts on clamp assembly.
- 2. Place (#4) cover over (#1) ROPS Frame assembly and hook corners
- 3. Raise each bow individually until locked into open position. Each bow has two positions in which it can be locked open. This is to allow for any stretch in canvas.
- 4. Insert (#1) ROPS Frame assembly with canvas attached, into tube on (#2) shaft and insert (#3) lock pin and close. If necessary adjust (#1) Frame (in highest setting) so that (#4) cover does not contact any part of bracket.